




Distributors of Industrial Electrical, Energy Management and Safety Equipment
Solving Problems ... Providing Solutions

AP SETUP METHOD

Step 1: After downloading the C-Home app and registering your account, you will
Need to add a device. Press the orange plus sign in the top right-hand corner

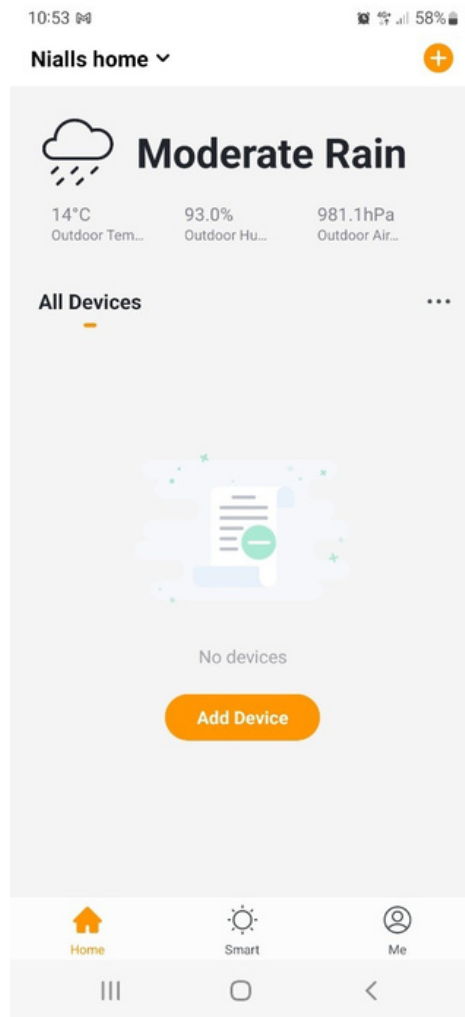


Unit 19, Oak Road Business Park, Western Industrial Estate, Dublin 12.
Telephone: +353 1 465 9010 Fax: +353 1 465 9011
Email: info@rfe.ie Website: www.rfe.ie


Directors R. Farrell (Chairman) I. Checkley (Managing Director) M. Farrell G. Cullen Est. 1981 Reg. in Ireland No. 085224




Step 2: Select Socket (Wi-Fi)

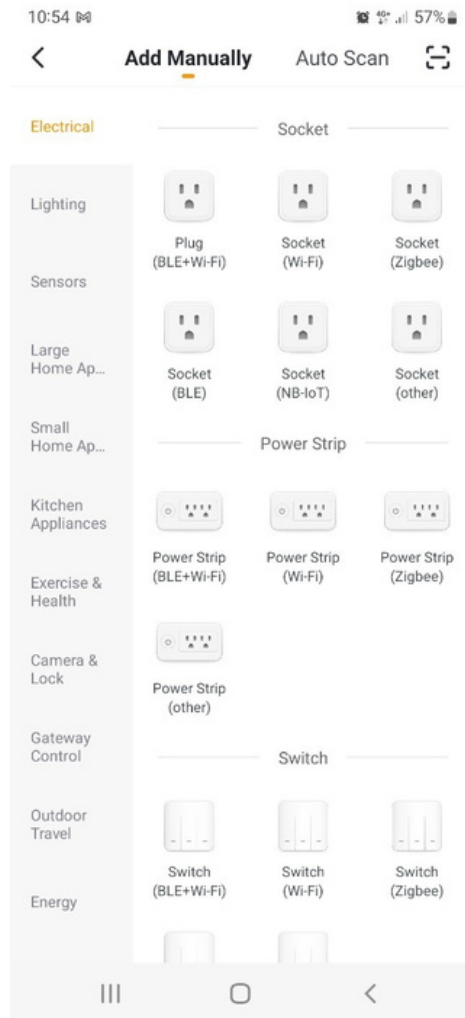

Step 3: Search for your Wi-Fi by pressing the arrows and then enter your Wi-Fi password
Then press Next. (Note, your password is case sensitive)

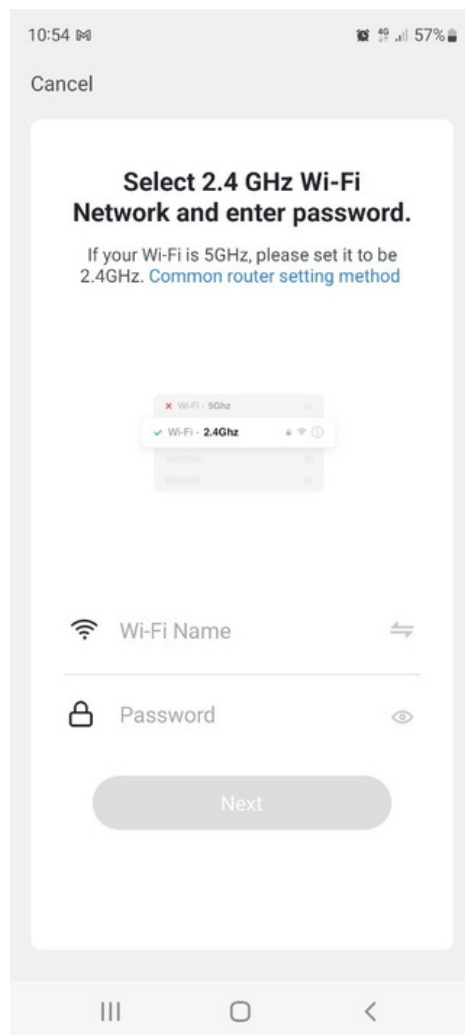


Step 4: Turn the power off to your device for about 10 seconds to reset it, you may need to go to your fuse board and switch the associated MCB off. Then turn the power back on.

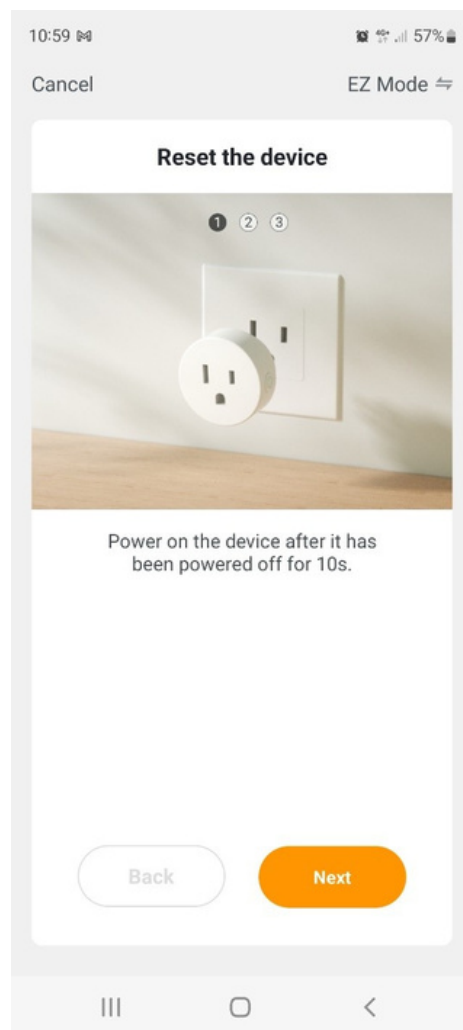


Step 5: On the top right-hand corner, press the EZ Mode and the select **AP Mode**


It will say switched to AP Mode

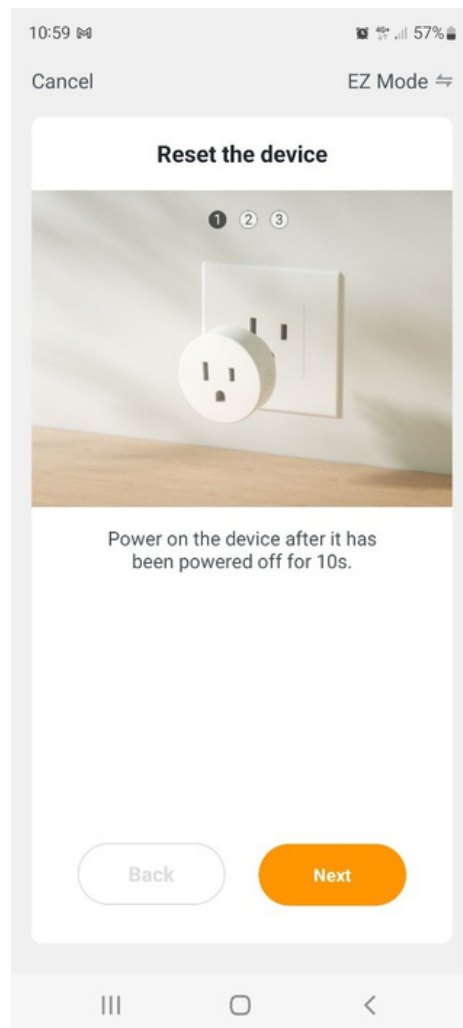

Step 6 : Press and hold the reset button for about 5 seconds, until the little blue light starts to flash fast. Then press next

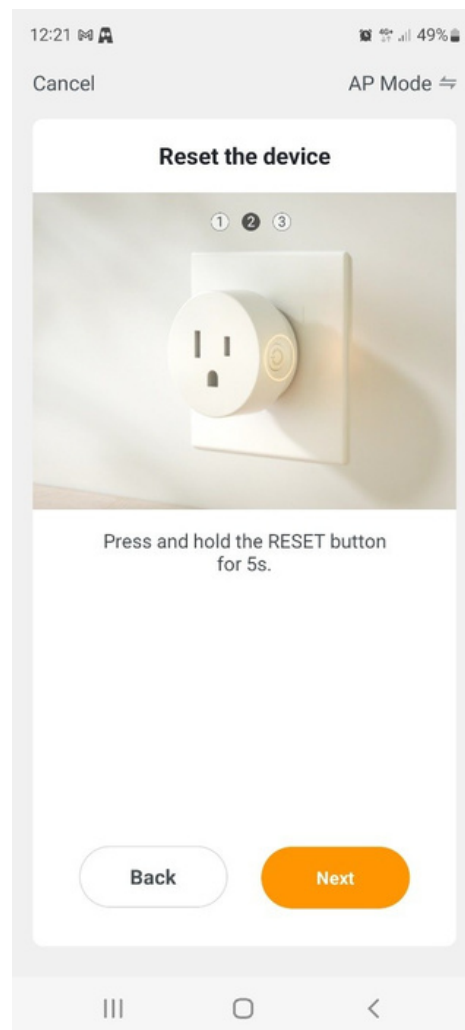


Step 7: When the blue light is flashing fast, press the button again until the blue light begins to Flash slowly. Then confirm it is flashing slowly by pressing on the small circle
And then press next.

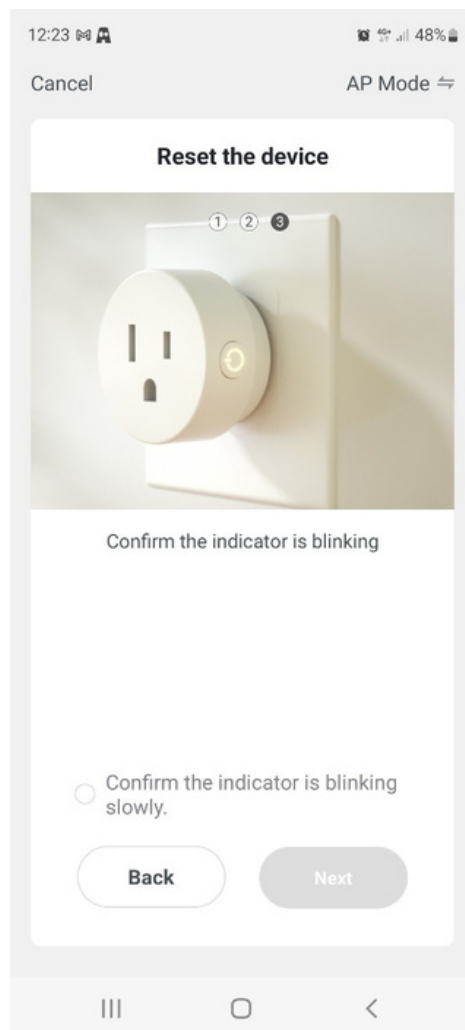

Step 8: Press the Go To Connect button, this brings you into your phones wi-fi settings and SmartLife should appear. Select SmartLife and connect.

Please note that it will say Connected without internet, this is ok and stay connected to SmartLife

When you are connected to the SmartLife Wi-Fi, press the back button on your phone, which should pop you back into the App

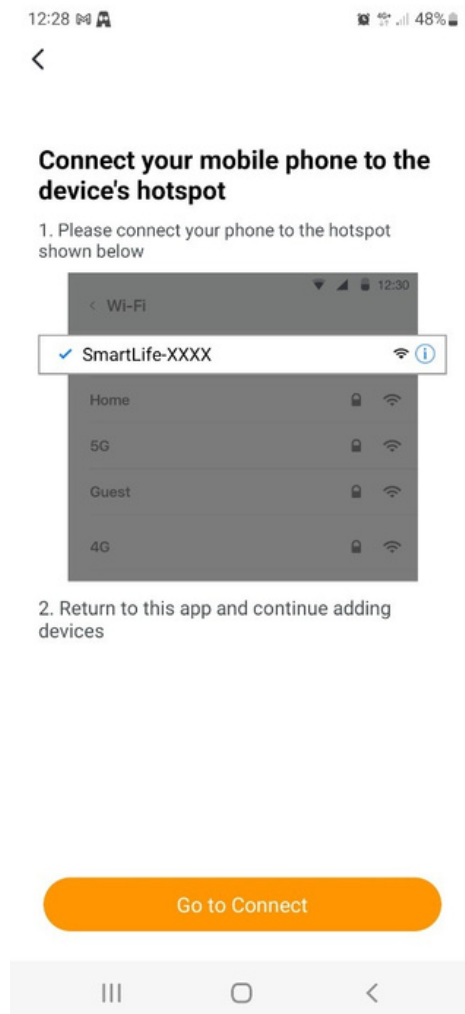

You have now entered the countdown and your device should connect to your phone

